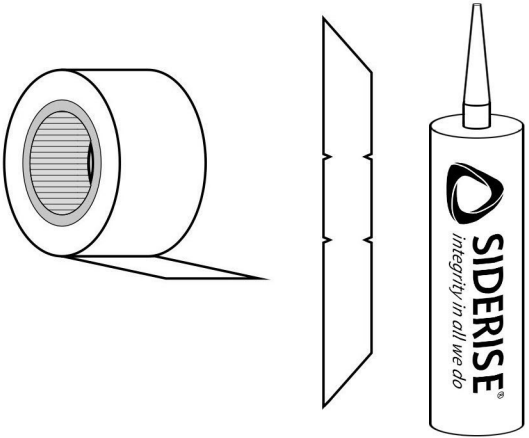
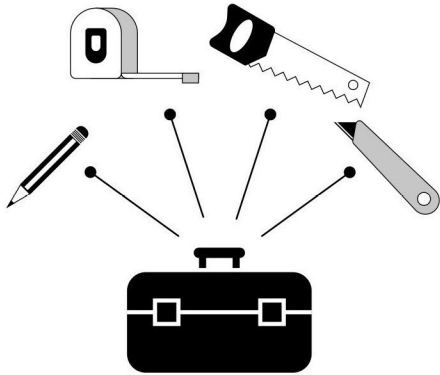
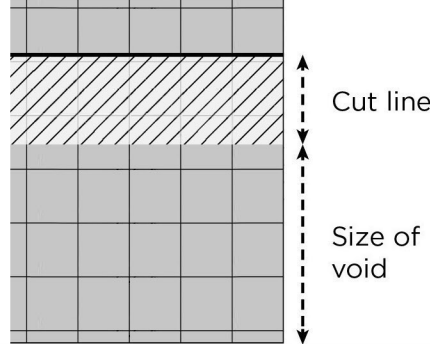
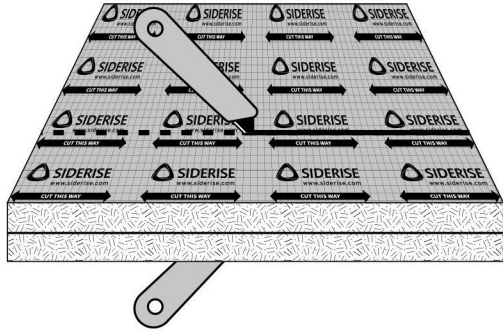
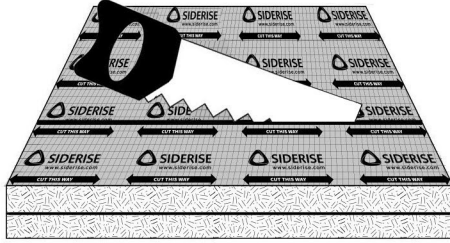
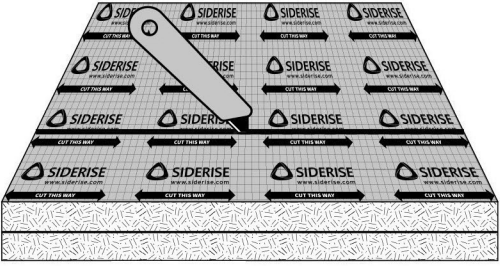
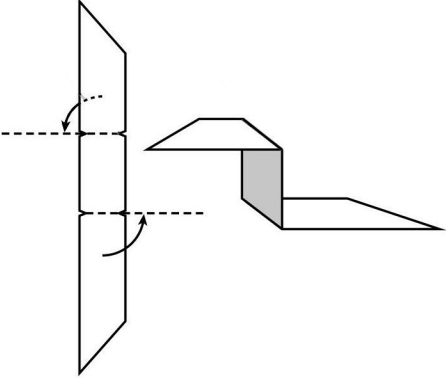
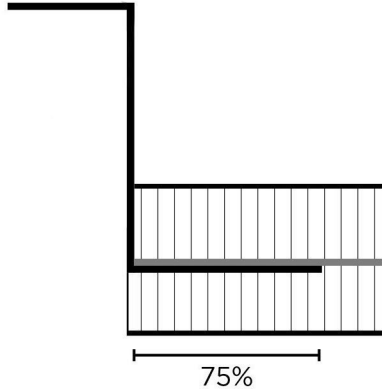
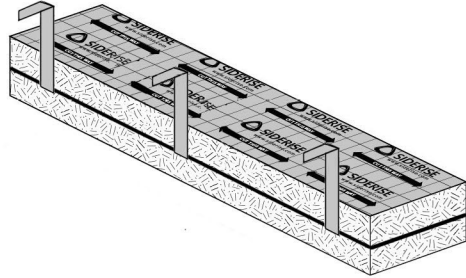
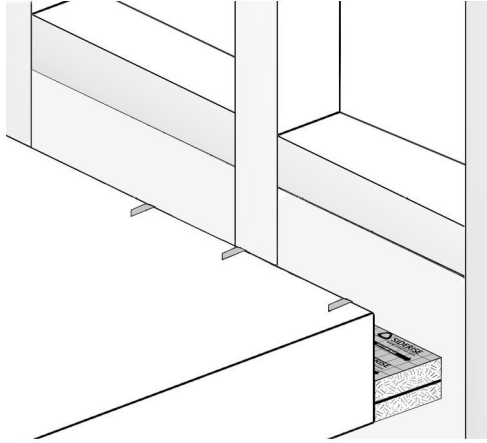
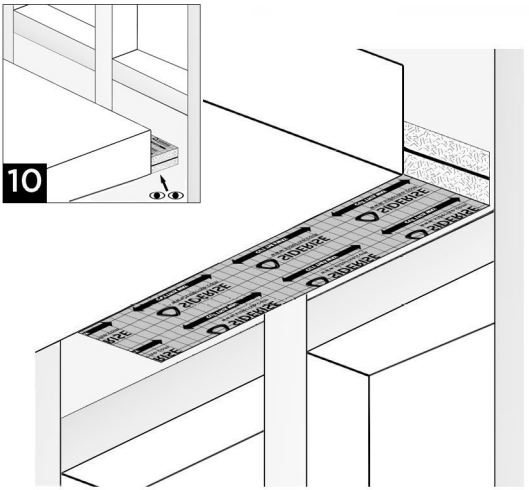
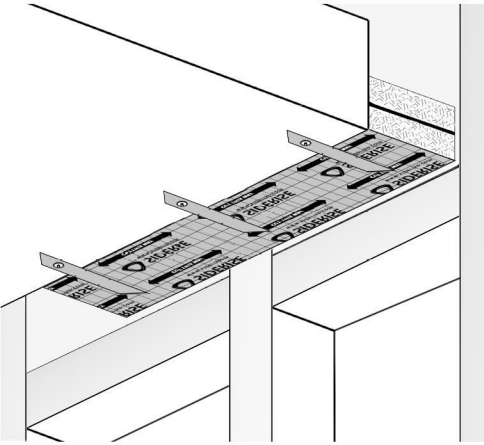
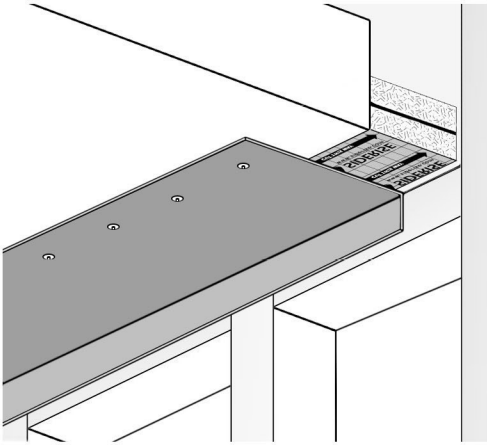
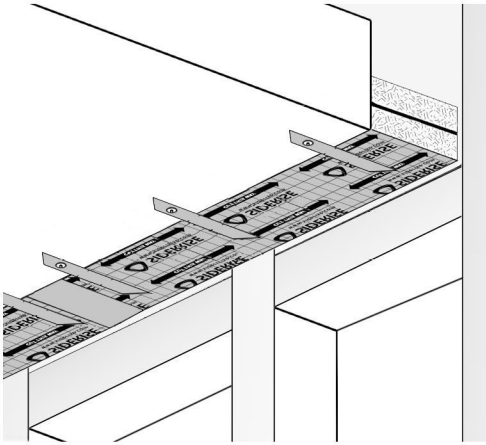



| | | | | |
|--|---|---|---|--|
|  |  |  |  |  |
| <p>1 You need: Siderise Foil Tape RFT 120/45, Siderise Brackets & Siderise Sealant.</p> | <p>2 Cutting on site - tools required: Marker, Tape Measure, Saw and Sharp Knife.</p> | <p>3 Cutting on site - measure and mark the sheet: size of the void plus 5mm.</p> | <p>4 Cutting on site - use a sharp knife to cut the CVB and a straight edge to guide cutting.</p> | <p>5 Cutting on site - use a saw to cut through the stone wool core down to the mass layer. Do not use a saw to cut through the mass layer.</p> |
|  |  |  |  |  |
| <p>6 Cutting on site - use the knife to cut through the mass layer then the saw again through the rest.</p> | <p>7 Installation from above: if installing from above, bend brackets to a Z shape.</p> | <p>8 Installation from above: the brackets must be long enough to penetrate at least 75% of the CVB width and must be inserted below the mass layer.</p> | <p>9 Installation from above: insert brackets at 400mm centres.</p> | <p>10 Installation from above: install the CVB into the void and fix the brackets to the floor slab.</p> |
|  |  | <p>OR</p>  |  | <p>SCAN / CLICK HERE FOR</p>  <p>SIDERISE integrity in all we do</p> |
| <p>11 Installation from below: if installing from below, insert the CVB into the void so that the bottom surface is flush with the soffit..</p> | <p>12 Installation from below: fix the brackets flat under the CVB to the soffit extending at least 75% of the void at 300mm centres..</p> | <p>13 Installation from below: alternatively install a flashing or panel directly below that is able to support the weight of the CVB.</p> | <p>14 For all installations: tightly abut next CVB to the previous, fill any gaps with Siderise Sealant and tape accessible side of joint with RFT 120/45.</p> | <p>FURTHER INSTRUCTIONS</p> |